




## Simple care guidelines

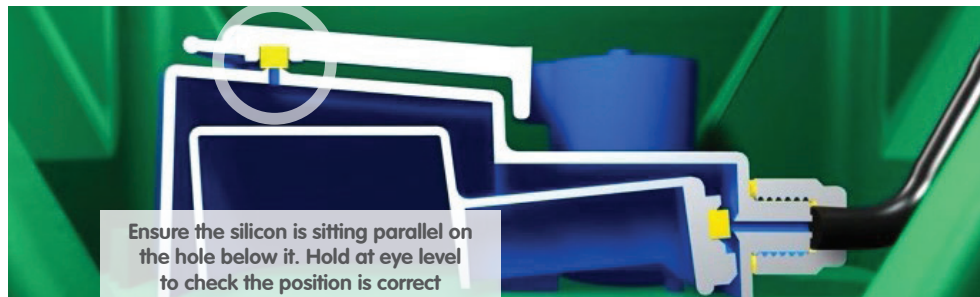

Ensure the silicon is sitting parallel on the hole below it. Hold at eye level to check the position is correct

### Ensuring that the AQUAvalve floods and drains correctly

- 1 Making sure your AQUAvalve floods and drains correctly is simply achieved and only takes a few seconds.
- 2 Hold the AQUAvalve at eye level so that you can see the silicon fitted to the top float resting on the hole below it.
- 3 The silicon must create a tight seal when touching the hole.
- 4 If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicon, drop the float and hold at eye level again. Repeat the procedure if necessary.

### Care and maintenance

- 1 At the end of your growing season, clean the AQUAvalve using warm soapy water. Using an old tooth brush will help.

The AQUAvalve is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.

At this point it is advisable to remove the silicones to avoid them being lost.

- 2 It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve nozzle, this will remove any lime scale build up that may have occurred during the growing season.

Blowing through the AQUAvalve nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve nozzle.

**This will potentially damage the AQUAvalve beyond repair.**

## Your Auto 9 XL Set-up Guidelines

# AUTO 9 XL



## Auto 9 XL SmartPot contents

- 1x Auto 9 XL tray, lid & access cover
- 1x AQUAvalve
- 1x AQUAvalve cover
- 1x ¼ top hat grommet
- 4ft length of ¼ piping
- 9x 5 gallon SmartPot
- 9x PotSock Round



## Auto 9 XL contents

- 1x Auto 9 XL tray, lid & access cover
- 1x AQUAvalve
- 1x AQUAvalve cover
- 1x ¼ top hat grommet
- 4ft length of ¼ piping
- 9x 6.6 gallon XL solid pot
- 9x root control disc



## Required Reservoir Capacity




FlexiTank and FlexiTank Pro are the only collapsible reservoirs that AutoPot recommend for use with Auto 9 XL Systems.


A minimum 25 gallon reservoir is required per unit.

FlexiTank or FlexiTank Pro Capacity	Auto 9 XL System Size
FlexiTank / Pro 25 gal	1x Auto 9 XL
FlexiTank / Pro 60 gal	2x Auto 9 XL
FlexiTank / Pro 105 gal	4x Auto 9 XL
FlexiTank 200 gal	8x Auto 9 XL
FlexiTank 265 gal	10x Auto 9 XL


## Pot and Tray Dimensions

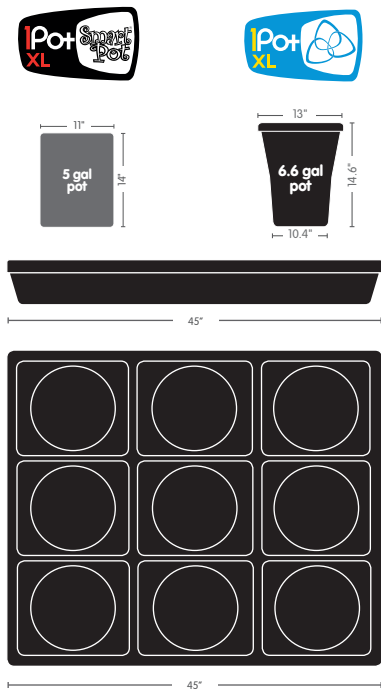


## Auto 9 XL SmartPot Setup

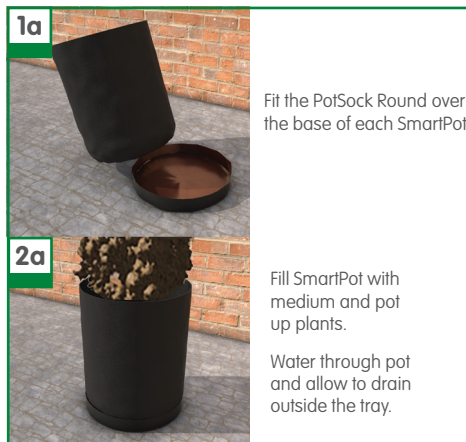

## Auto 9 XL Setup

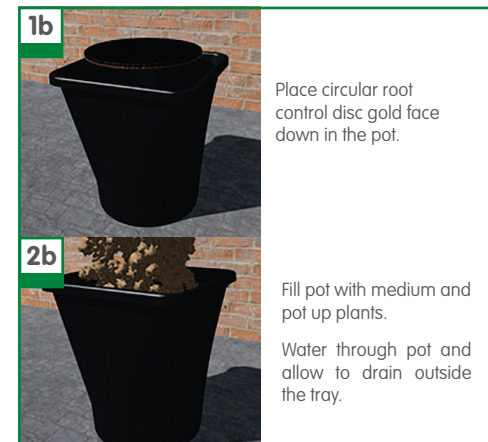

## Common to both:

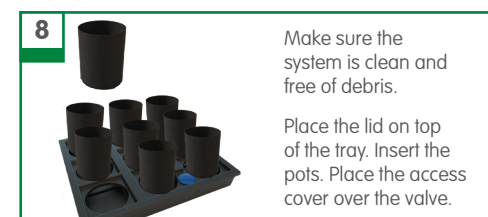

**Allow your plants to establish for 10-14 days before turning system on**

## Advice

- Please note that multiple SmartPots may increase room humidity due to the exposed surfaces of the fabric pots.
- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 10 to 14 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your reservoir to a minimum of 6" above the highest AQUAvalve and re-fill the reservoir when there is approximately a 1/3 of the solution left - **NEVER ALLOW THE RESERVOIR TO RUN EMPTY.**
- For best results, we recommend mineral fertilisers. Do not use liquid organic fertilisers, as they have a tendency to block small pipe work.
- Clean all substrate from the bottom and sides of the pots before placing in each tray. This will ensure your system is clean from the start.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles.

## Advice

If you require any guidance email - [info@autopot-usa.com](mailto:info@autopot-usa.com)